

HC18M121B1-SOP8 引脚图

HC18M121B1_SOP8_T

VDD	1	8	GND
TOCKI/TM1PWM/AN10/PORTB2	2	7	PORTA0/AN0/PGC/TM1PWM
VPP/PORTB5	3	6	PORTA1/AN1/PGD/TM2PWM
T2CKI/TM2PWM/AN7/PORTA7	4	5	PORTA2/AN2/PCK/VREF/TM1PWM

HC18M121B1-SOP14 引脚图

HC18M121B1_SOP14_T


VDD	1	14	GND
OSCI/AN15/PORTB7	2	13	PORTA0/AN0/PGC/TM1PWM
OSCO/AN14/PORTB6	3	12	PORTA1/AN1/PGD/TM2PWM
VPP/PORTB5	4	11	PORTA2/AN2/PCK/VREF/TM1PWM
TM2PWM/AN11/PORTB3	5	10	PORTA3/AN3
TOCKI/TM1PWM/AN10/PORTB2	6	9	PORTA7/AN7/TM2PWM/T2CKI
T1CKI/TM1PWM/INT0/AN8/PORTB0	7	8	PORTB1/AN9/INT1/TM2PWM

HC18M121B1-S16B 引脚图


HC18M121B1_S16B_T

VDD	1	16	GND
OSCI/AN15/PORTB7	2	15	PORTA0/AN0/PGC/TM1PWM
OSCO/AN14/PORTB6	3	14	PORTA1/AN1/PGD/TM2PWM
VPP/PORTB5	4	13	PORTA2/AN2/PCK/VREF/TM1PWM
TM2PWM/AN11/PORTB3	5	12	PORTA3/AN3
TOCKI/TM1PWM/AN10/PORTB2	6	11	PORTA4/AN4
TM2PWM/INT1/AN9/PORTB1	7	10	PORTA6/AN6
T1CKI/TM1PWM/INT0/AN8/PORTB0	8	9	PORTA7/AN7/TM2PWM/T2CKI

HC18M121B1-SOP8 转接板接线图

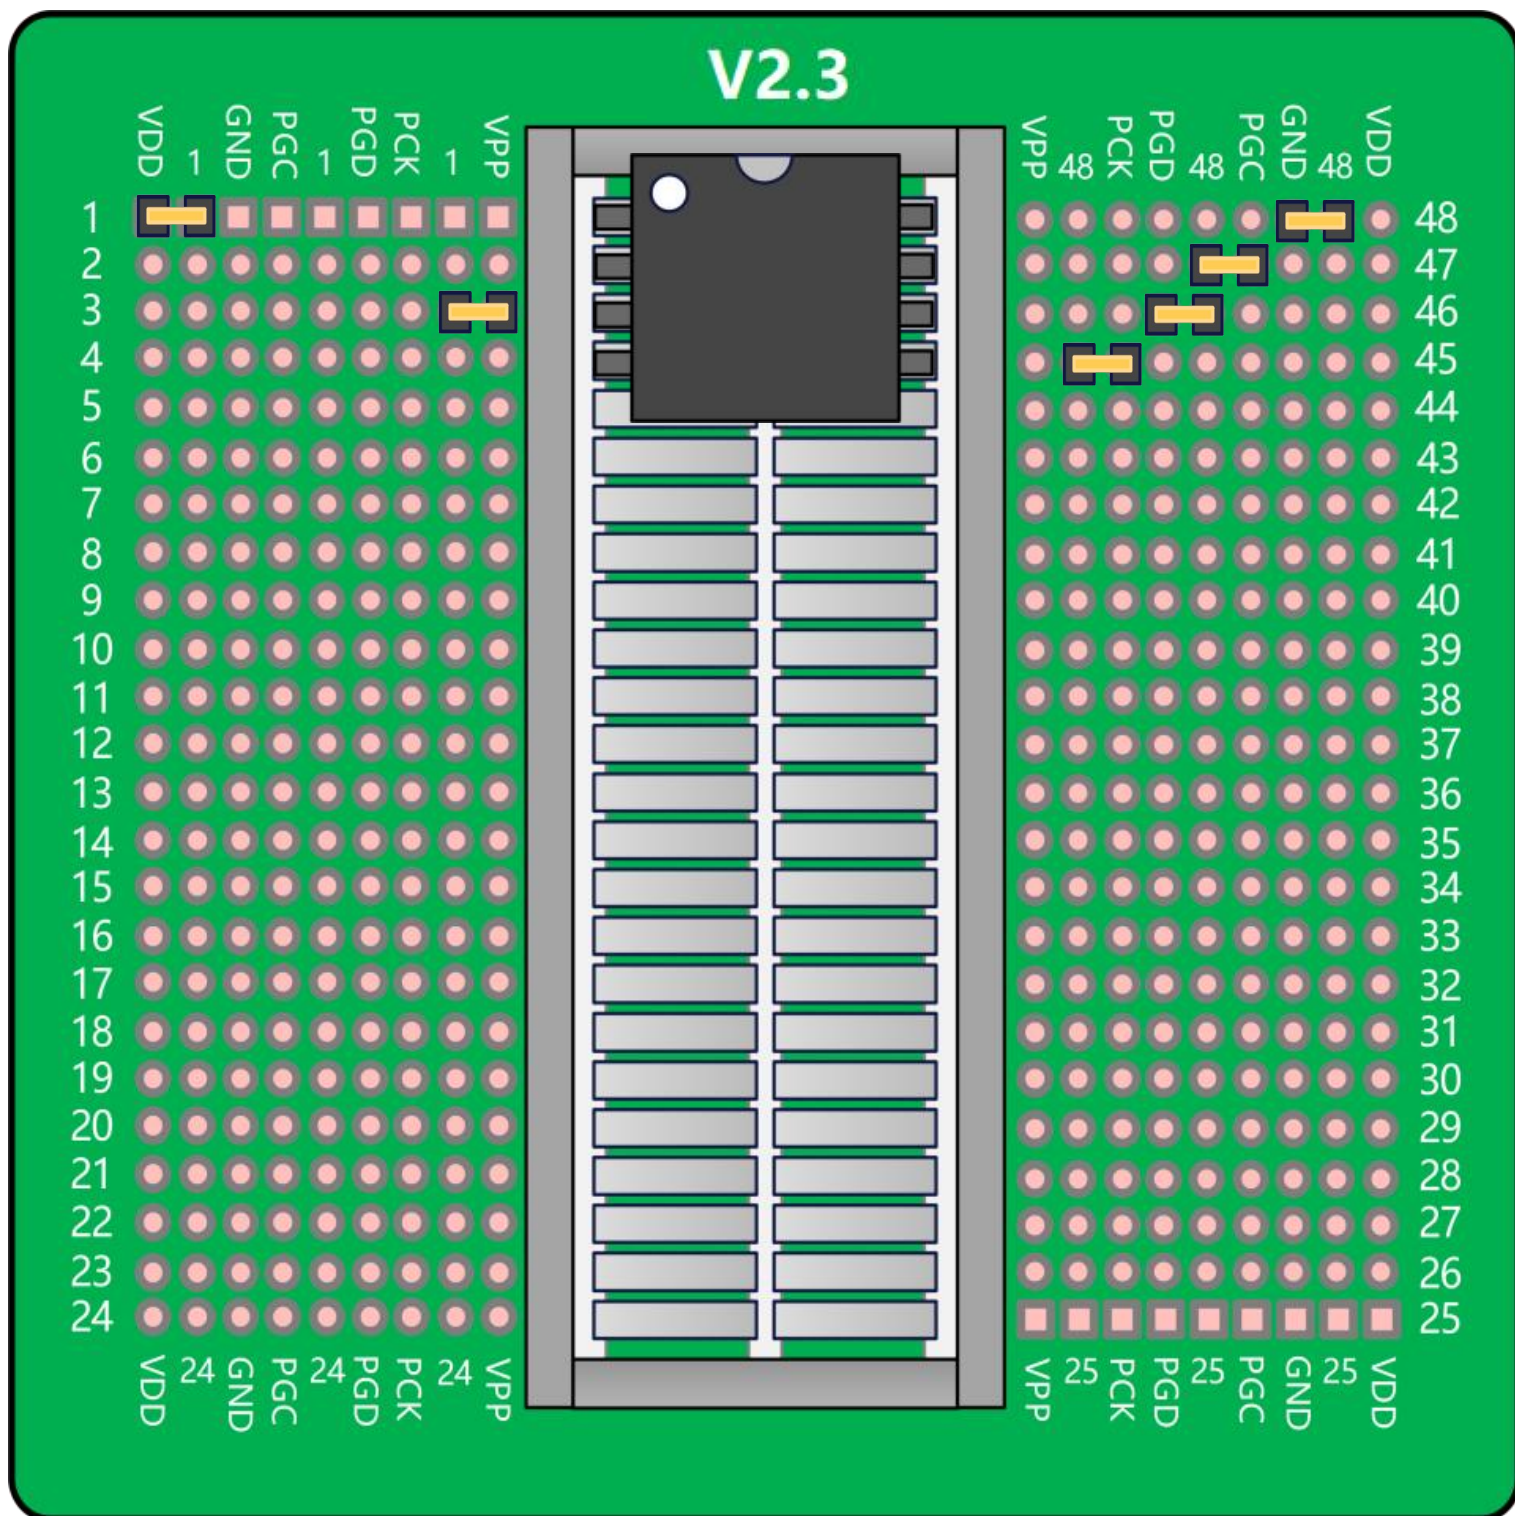

HC18M121B1-SOP14-转接板接线图

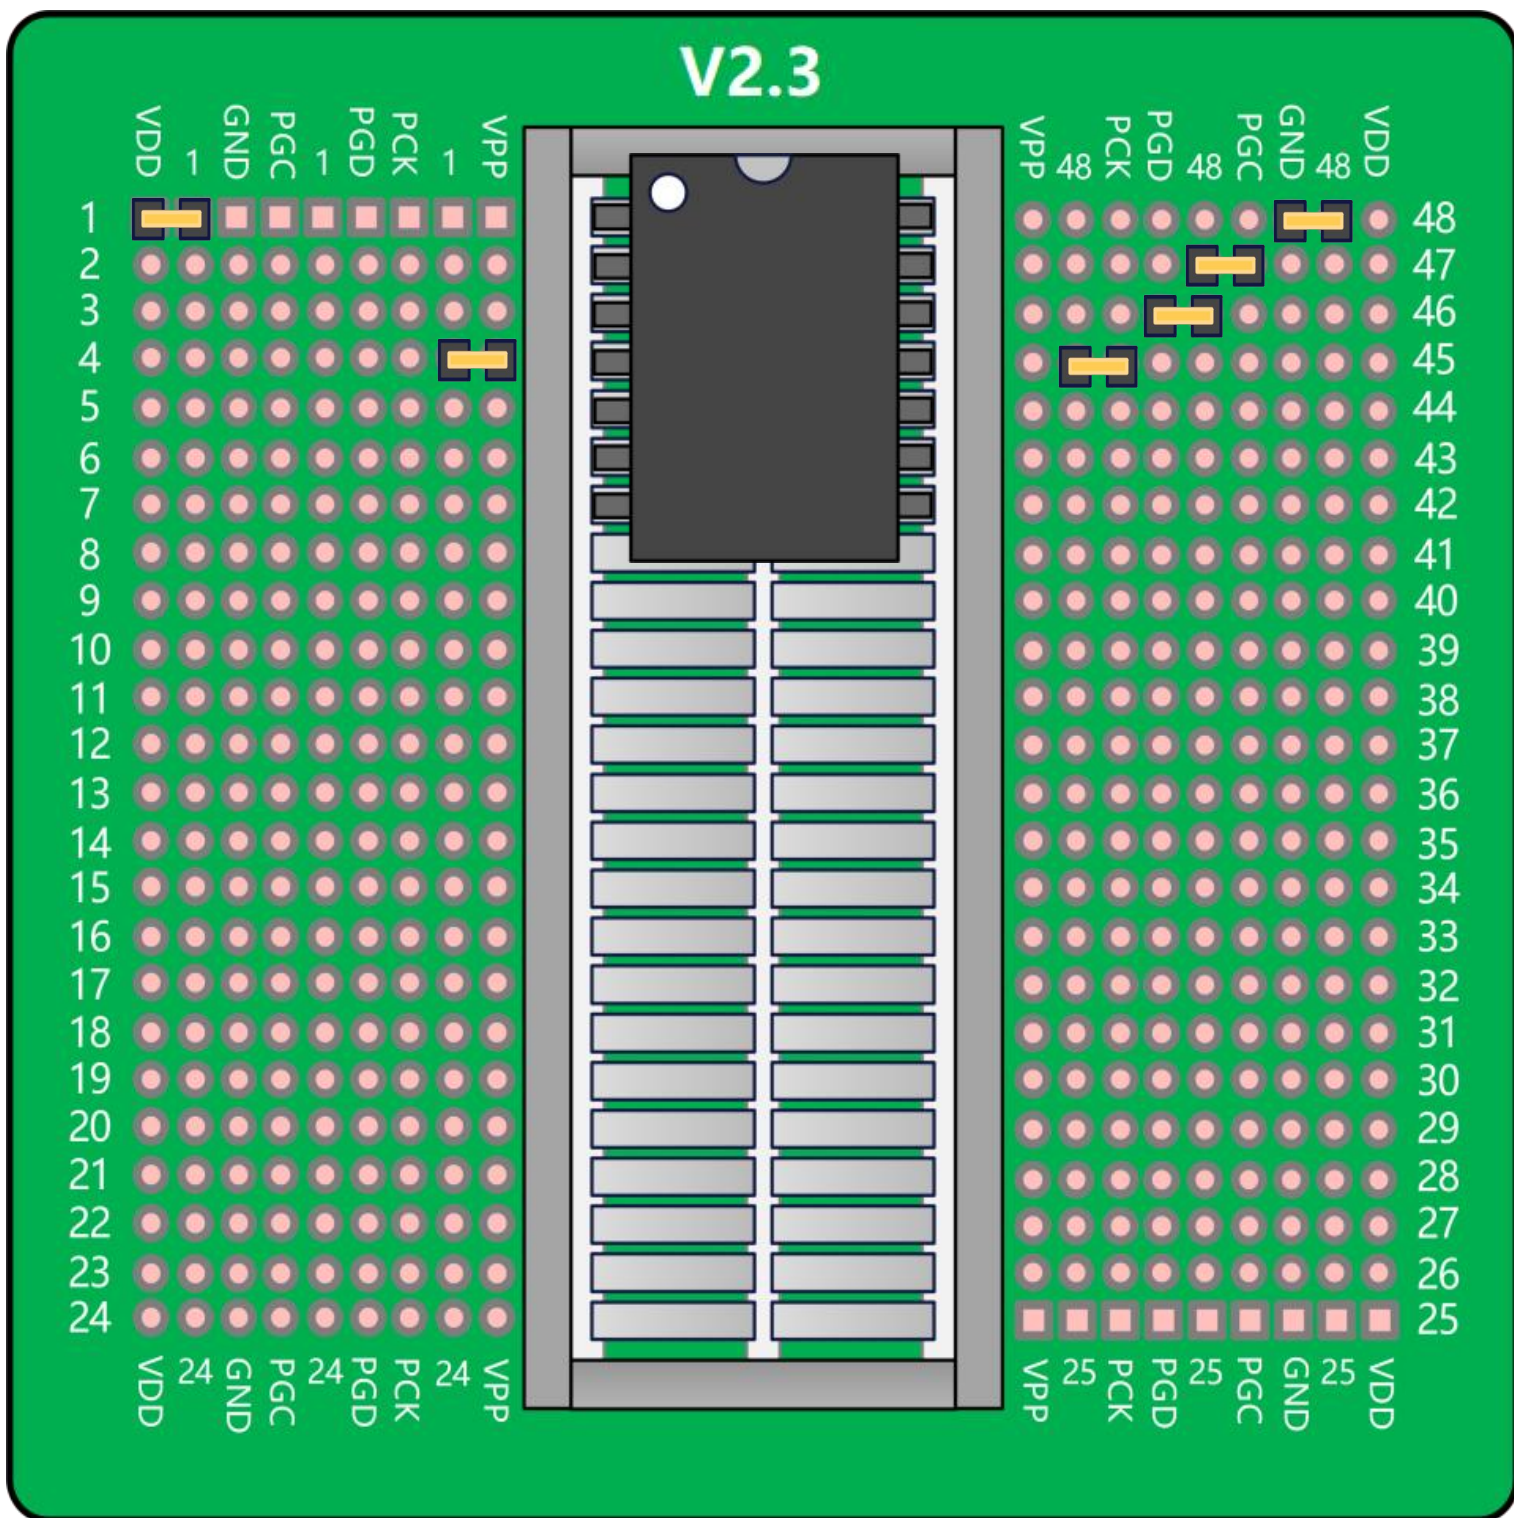

HC18M121B1-S16B-转接板接线图

